




# ***ESABMig 405***

# ***ESABMig 505***

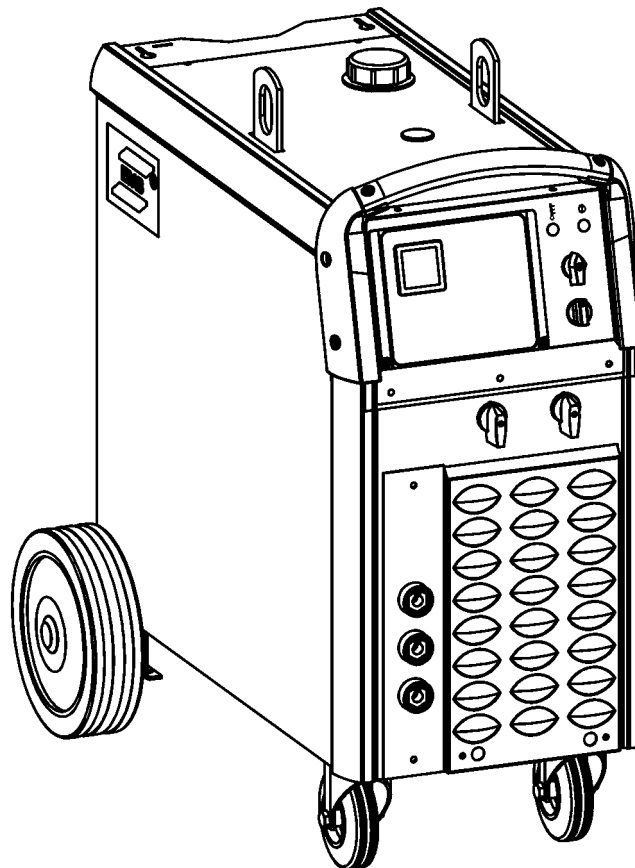

**Instruction manual**

<b>1 DIRECTIVE</b> .....	<b>3</b>
<b>2 SAFETY</b> .....	<b>3</b>
<b>3 INTRODUCTION</b> .....	<b>5</b>
3.1 Equipment .....	5
<b>4 TECHNICAL DATA</b> .....	<b>5</b>
<b>5 INSTALLATION</b> .....	<b>6</b>
5.1 Placing .....	7
5.2 Assembly of components .....	7
5.3 Assembly of stabilizer .....	8
5.4 Electrical installation .....	8
5.5 Mains power supply .....	10
<b>6 OPERATION</b> .....	<b>11</b>
6.1 Connection and control devices .....	11
6.2 Function explanations .....	12
<b>7 MAINTENANCE</b> .....	<b>13</b>
7.1 Inspection and cleaning .....	13
7.2 Topping up the coolant .....	13
<b>8 FAULT TRACING</b> .....	<b>14</b>
<b>9 ORDERING OF SPARE PARTS</b> .....	<b>14</b>
<b>DIAGRAM</b> .....	<b>15</b>
<b>ACCESSORIES</b> .....	<b>20</b>

---

## 1 DIRECTIVE

---

### DECLARATION OF CONFORMITY

ESAB Welding Equipment AB, S-695 81 Laxå, Sweden, gives its unreserved guarantee that welding power source ESABMig 405, ESABMig 505 from serial number 246 complies with standard IEC/EN 60974-1, in accordance with the requirements of directive (73/23/EEC) and addendum (93/68/EEC) and with standard EN 60974-10 in accordance with the requirements of directive (89/336/EEC) and addendum (93/68/EEC).

---

Laxå 24.02.2003



Henry Selenius  
Vice President  
ESAB Welding Equipment AB  
695 81 LAXÅ  
SWEDEN

Tel: + 46 584 81000

Fax: + 46 584 411924

---

## 2 SAFETY

---

Users of ESAB welding equipment have the ultimate responsibility for ensuring that anyone who works on or near the equipment observes all the relevant safety precautions. Safety precautions must meet the requirements that apply to this type of welding equipment. The following recommendations should be observed in addition to the standard regulations that apply to the workplace.

All work must be carried out by trained personnel well-acquainted with the operation of the welding equipment. Incorrect operation of the equipment may lead to hazardous situations which can result in injury to the operator and damage to the equipment.

1. Anyone who uses the welding equipment must be familiar with:
  - its operation
  - location of emergency stops
  - its function
  - relevant safety precautions
  - welding
2. The operator must ensure that:
  - no unauthorised person is stationed within the working area of the equipment when it is started up.
  - no-one is unprotected when the arc is struck
3. The workplace must:
  - be suitable for the purpose
  - be free from draughts
4. Personal safety equipment
  - Always wear recommended personal safety equipment, such as safety glasses, flame-proof clothing, safety gloves.
  - Do not wear loose-fitting items, such as scarves, bracelets, rings, etc., which could become trapped or cause burns.
5. General precautions
  - Make sure the return cable is connected securely.
  - Work on high voltage equipment **may only be carried out by a qualified electrician.**
  - Appropriate fire extinguishing equipment must be clearly marked and close at hand.
  - Lubrication and maintenance must **not** be carried out on the equipment during operation.



# WARNING



**ARC WELDING AND CUTTING CAN BE INJURIOUS TO YOURSELF AND OTHERS. TAKE PRECAUTIONS WHEN WELDING. ASK FOR YOUR EMPLOYER'S SAFETY PRACTICES WHICH SHOULD BE BASED ON MANUFACTURERS' HAZARD DATA.**

**ELECTRIC SHOCK – Can kill**

- Install and earth the welding unit in accordance with applicable standards.
- Do not touch live electrical parts or electrodes with bare skin, wet gloves or wet clothing.
- Insulate yourself from earth and the workpiece.
- Ensure your working stance is safe.

**FUMES AND GASES – Can be dangerous to health**

- Keep your head out of the fumes.
- Use ventilation, extraction at the arc, or both, to take fumes and gases away from your breathing zone and the general area.

**ARC RAYS – Can injure eyes and burn skin.**

- Protect your eyes and body. Use the correct welding screen and filter lens and wear protective clothing.
- Protect bystanders with suitable screens or curtains.

**FIRE HAZARD**

- Sparks (spatter) can cause fire. Make sure therefore that there are no inflammable materials nearby.


**NOISE – Excessive noise can damage hearing**

- Protect your ears. Use earmuffs or other hearing protection.
- Warn bystanders of the risk.

**MALFUNCTION – Call for expert assistance in the event of malfunction.**

**READ AND UNDERSTAND THE INSTRUCTION MANUAL BEFORE INSTALLING OR OPERATING.**

**PROTECT YOURSELF AND OTHERS!**

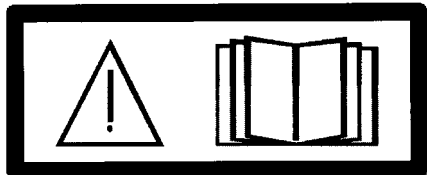

## WARNING!

Read and understand the instruction manual before installing or operating.



## WARNING!

Do not use the power source for thawing frozen pipes.



**This product is solely intended for arc welding.**

## 3 INTRODUCTION

The ESABMig 405 and ESABMig 505 are step switched power sources designed for MIG/MAG-welding together with wire feed units ESABFeed 30, ESABFeed 48 and the most of ESAB wire feeders.

The power units are fan-cooled and equipped with thermal overload protection.

The machines can be fitted with an instrument for display of current and voltage. It incorporates a hold function and can be calibrated.

The machines can be fitted with a flow guard.

**ESAB's accessories for the product can be found on page 20.**

 

### 3.1 Equipment

The power source is supplied with:

- Return cable 5m with return clamp
- Shelf for gas cylinder
- Guide pin for wire feed unit
- Instruction manual

## 4 TECHNICAL DATA

<b>ESABMig 405</b>		
<b>Voltage</b>	400-415V, 3-50/60 Hz	230/400-415/500V 3-50 Hz 230/440-460 3-60Hz
<b>Permissible load</b> at 100 % duty cycle	280 A/28 V	280 A/28 V
at 60 % duty cycle	365 A/32 V	365 A/32 V
at 50 % duty cycle	400 A/34 V	400 A/34 V
<b>Setting range (DC)</b>	50A/16,5V-400A/34V	50A/16,5V-400A/34V
<b>Open circuit voltage</b>	17-45 V	17-45 V
<b>Open circuit power</b> with cooling unit	360 W 600 W	360 W 600 W
<b>Efficiency</b> at max current	71%	71%
<b>Power factor</b> at max current	0,98	0,98
<b>Control voltage</b>	42 V, 50/60 Hz	42 V, 50/60 Hz
<b>Dimensions l x w x h</b>	812 x 552 x 925	812 x 552 x 925
<b>Weight</b> with cooling unit	144 kg 158 kg	145 kg 158 kg
<b>Operating temperature</b>	-10 to +40°C	-10 to +40°C
<b>Enclosure class</b>	IP 23	IP 23
<b>Application classification</b>	<b>S</b>	<b>S</b>

ESABMig 505		
<b>Voltage</b>	400–415V, 3–50/60 Hz	230/400–415/500V 3–50 Hz 230/440–460 3–60Hz
<b>Permissible load</b> at 100 % duty cycle	390 A/33,5 V	390 A/33,5 V
at 60 % duty cycle	500 A/39 V	500 A/39 V
<b>Setting range (DC)</b>	50A/16,5V–500A/39V	50A/16,5V–500A/39V
<b>Open circuit voltage</b>	17–50 V	17–50 V
<b>Open circuit power</b>	440 W	440 W
with cooling unit	620 W	620 W
<b>Efficiency</b> at max current	82%	82%
<b>Power factor</b> at max current	0,92	0,92
<b>Control voltage</b>	42 V, 50/60 Hz	42 V, 50/60 Hz
<b>Dimensions l x w x h</b>	812 x 552 x 925	812 x 552 x 925
<b>Weight</b>	214 kg	215 kg
with cooling unit	228 kg	229 kg
<b>Operating temperature</b>	–10 to +40°C	–10 to +40°C
<b>Enclosure class</b>	IP 23	IP 23
<b>Application classification</b>		


### Duty cycle

 The duty cycle refers to the time as a percentage of a ten-minute period that you can weld at a certain load without overloading.

### Enclosure class

The IP code indicates the enclosure class, i. e. the degree of protection against penetration by solid objects or water. Equipment marked **IP23** is designed for indoor and outdoor use.

### Application class

The symbol  indicates that the power source is designed for use in areas with increased electrical hazard.

## 5 INSTALLATION

*The installation must be executed by a professional.*




### WARNING!

This product is intended for industrial use. In a domestic environment this product may cause radio interference. It is the user's responsibility to take adequate precautions.

### Lifting instructions


The power supply should be lifted by means of its lifting eye. The handle is only intended for pulling it along the ground.

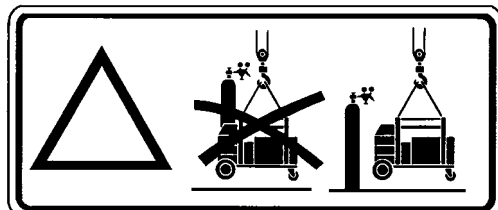

## 5.1 Placing

Position the welding power source such way that its cooling air inlets and outlets are not obstructed.

## 5.2 Assembly of components

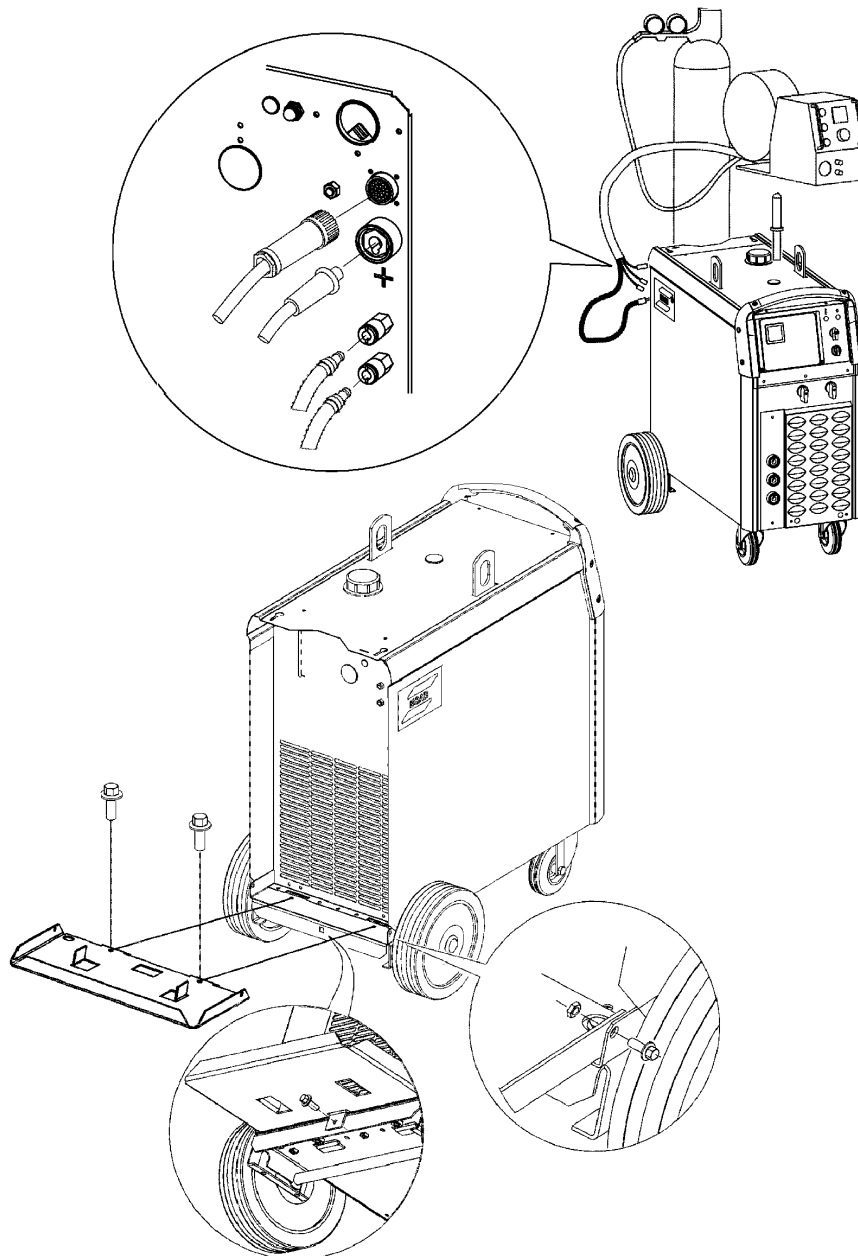


### WARNING!

During transport, the rear wheels of the power source are in their forward position. Before use, place the wheels in their rear position.

### 5.3 Assembly of counter balance


Assemble the stabilizer + CB KIT if the counter balance is to be installed on machine. The stabilizer + CB KIT is an accessory. Ordering number you can find on page 21.

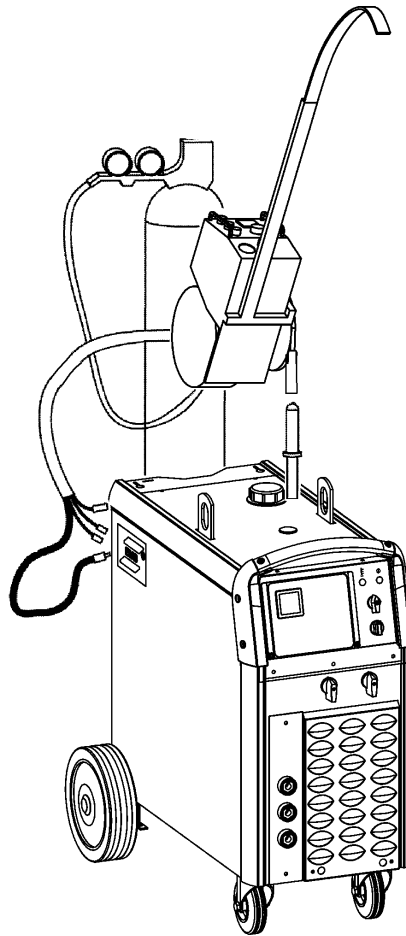

**Attention!** Utilization of counter balance without stabilizer may cause the machine tipping over.




### 5.4 Electrical installation

ESABMig 405

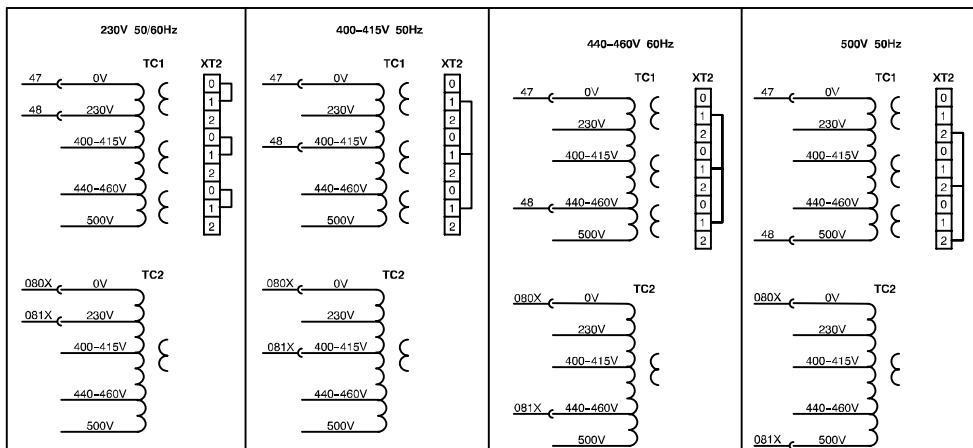




**ESABMig 505**

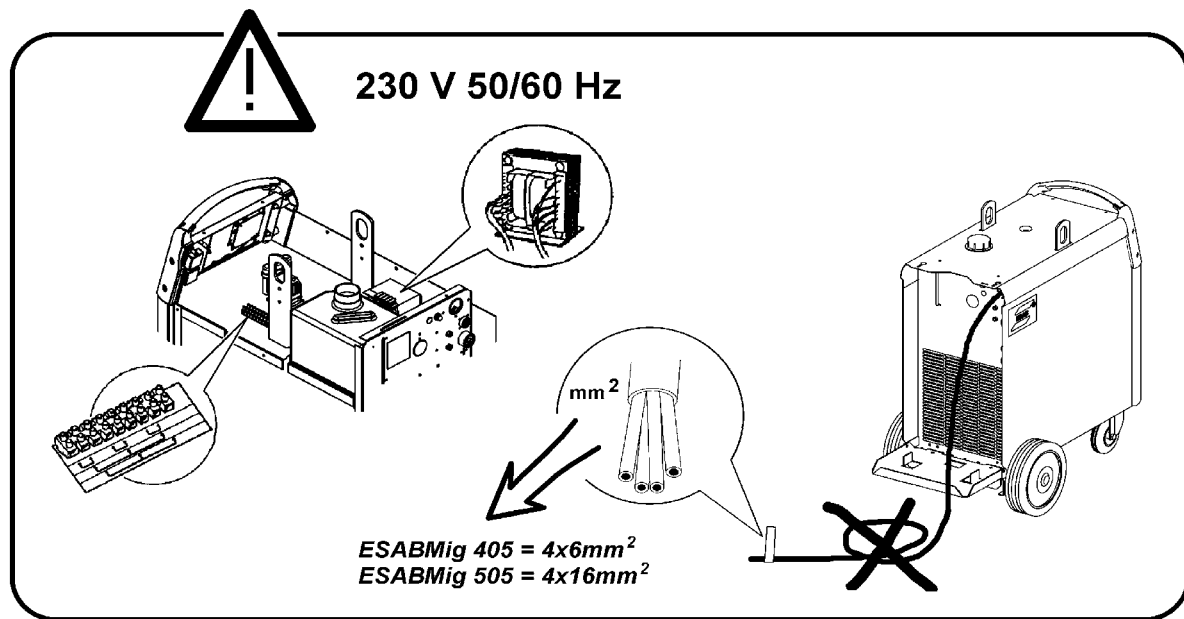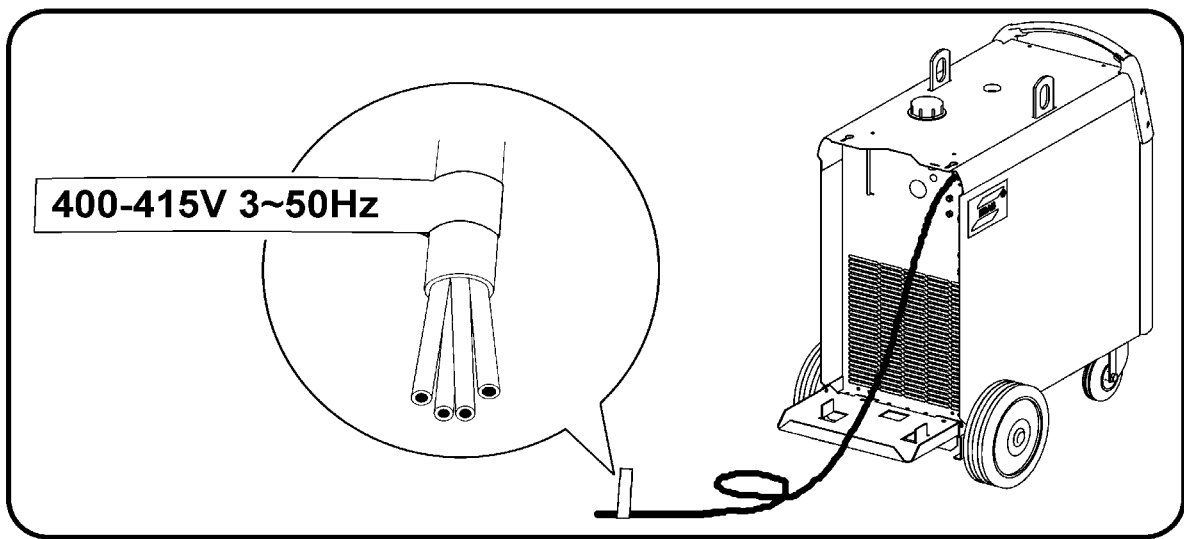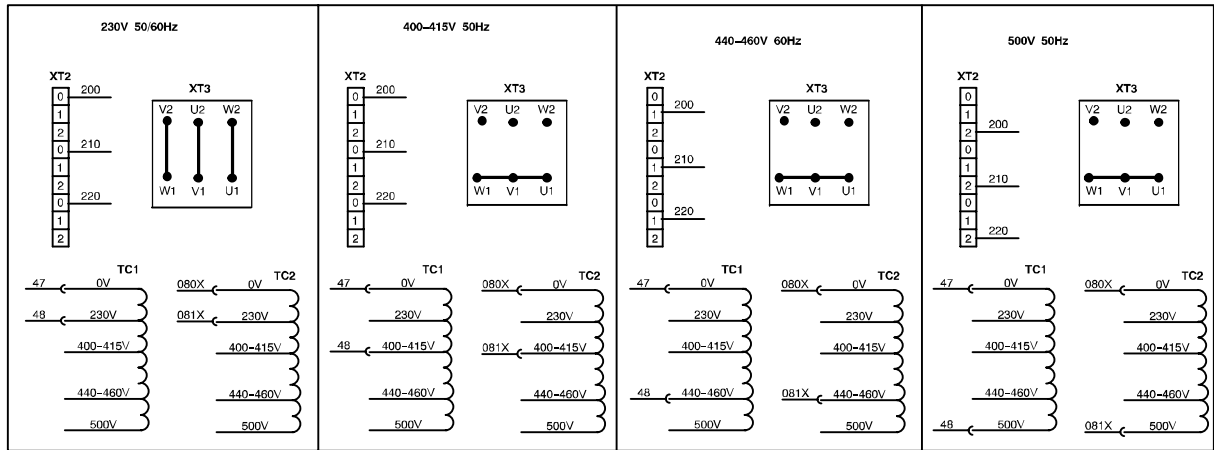

## 5.5 Mains power supply

Check that the unit is connected to the correct mains power supply voltage, and that it is protected by the correct fuse size. A protective earth connection must be made, in accordance with regulations.

Rating plate with supply connection data

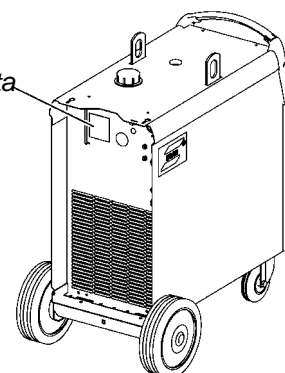

<b>ESABMig 405</b>	<b>3~ 50 Hz</b>	<b>3~ 50/60 Hz</b>	<b>3~ 50 Hz</b>	<b>3~ 60 Hz</b>	<b>3~ 60 Hz</b>
<b>Voltage V</b>	230	400/415	500	230	440/460
<b>Current A</b>					
at 100% duty cycle	28	16	13	28	14
at 60% duty cycle	42	24	19	41	21
at 50% duty cycle	45	28	20	45	22
<b>Cable area mm<sup>2</sup></b>	4 x 6	4 x 2,5	4 x 2,5	4 x 6	4 x 2,5
<b>Fuse, slow A</b>	25	20	20	25	20

<b>ESABMig 505</b>	<b>3~ 50 Hz</b>	<b>3~ 50/60 Hz</b>	<b>3~ 50 Hz</b>	<b>3~ 60 Hz</b>	<b>3~ 60 Hz</b>
<b>Voltage V</b>	230	400/415	500	230	440/460
<b>Current A</b>					
at 100% duty cycle	43	25	20	43	23
at 60% duty cycle	68	39	31	68	35
<b>Cable area mm<sup>2</sup></b>	4 x 16	4 x 6	4 x 6	4 x 16	4 x 6
<b>Fuse, slow A</b>	63	35	35	63	25

**NB:** The mains cable areas and fuse sizes as shown above are in accordance with Swedish regulations. They may not be applicable in other countries: make sure that the cable area and fuse sizes comply with the relevant national regulations.

## 6 OPERATION

**General safety regulations for the handling of the equipment can be found on page 3. Read through before you start using the equipment!**



### WARNING – TIPPING RISK!

There is a risk of tipping while transportation and operation, if the welding machine leans more than 10°. In that case appropriate securing has to be provided !


### 6.1 Connection and control devices

- |   |  |    |  |
|---|--|----|--|
| 1 | Mains supply switch                                      | 9  | Connection for return cable (-), medium inductance       |
| 2 | Main supply switch for cooling unit ELP**                | 10 | Connection for return cable (-), low inductance          |
| 3 | Switch, precise control                                  | 11 | Connection for welding current cable (+)                 |
| 4 | Switch, coarse control                                   | 12 | Connection for control cable for wire feeder             |
| 5 | Indicating lamp, power supply ON                         | 13 | MCB  |
| 6 | Orange indicating lamp, overheating and loss of coolant* | 14 | Connection RED for cooling water from the wire feed unit |
| 7 | Space for digital meter (optional), see page 20          | 15 | Connection BLUE for cooling water to the wire feed unit  |
| 8 | Connection for return cable (-), high inductance         |    |  |

**NOTE!** Cooling water connections only available on certain models.

\* Indicating loss of coolant, only when water flow guard is used, see point 6.2.4

\*\* ELP = ESAB Logic Pump, see point 6.2.3.

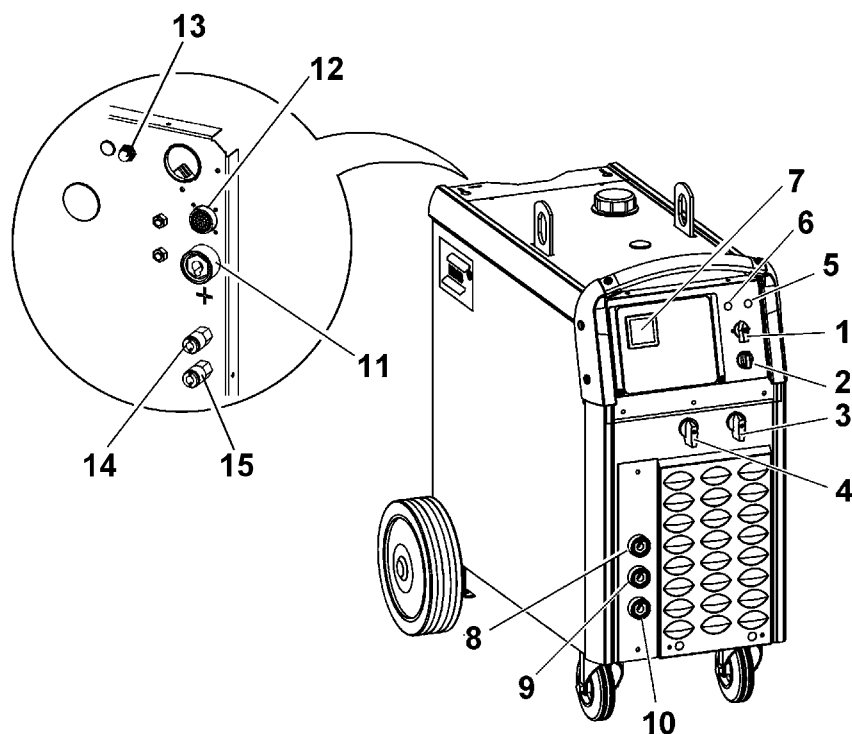

## 6.2 Function explanations

### 6.2.1 Start

When switched on, indicating lamps are checked for 2 seconds. Normally, if the machine is not overheated, it should start to work in idle mode, which is indicated by blinking of the supply-ON lamp. The fan and the coolant pump are stopped.

The fan starts from the first start of welding. The coolant pump starts at the same moment, if it is switched on by means of either the ELP switch on the wire feeder, or the pump supply switch on the power source.

### 6.2.2 Overheating protection

The power source has 2-step control of fan speed and overheating protection. If temperature crosses the threshold point, the fan starts to operate with increased speed. If the internal temperature becomes too high, the welding is interrupted and disabled. This state is indicated by permanent lighting of the orange indicating lamp on the front of the unit. It resets automatically when the temperature falls down.

### 6.2.3 Water connection

The ESABFeed has a sensor **ELP, ESAB Logic Pump**, which senses whether the water hoses of the welding gun are connected. When a water-cooled welding gun is connected, the water pump is active. For the ESABFeeds the pump supply switch on the power source should be left in position "0/ELP".

It is recommended to switch the power source off by means of the mains switch ON/OFF for connecting the cooling water hoses to/from the ESABFeed wire feed unit.

The pump supply switch must be in position "I" exclusively for other types of wire feeders, when a water-cooled welding gun is used. When a self-cooled welding gun is used the pump switch must be in position "ELP/0".

**Note**, if a water-cooled welding gun is used when the pump is inactive, the welding gun might be damaged.

### 6.2.4 Water flow guard

The water flow guard interrupts and disables the welding in the event of loss of coolant. This state is indicated by blinking of the orange indicating lamp on the front of the power source. If there is a lack of coolant flow, after 1 min the pump is switched off and latched in this state. The pump restarts from this state along with starting of welding.

The water flow guard is an accessory. Ordering number see on page 20.

### 6.2.5 Idle mode

The machine has an idle mode. The fan is switched off 5 min after the last welding or after 5 min of work with decreased speed without welding. The pump is switched off 3 min after the last welding. When both fan and pump are switched off the power-supply lamp on the front panel is blinking.

### 6.2.6 Inductance

Higher inductance produces a more flowing weld and fewer spatters. Lower inductance produces a harsher sound and a stable, concentrated arc.

---

## 7 MAINTENANCE

---

*Regular maintenance is important for safe, reliable operation.*

**Note!**

*All guarantee undertakings from the supplier cease to apply if the customer himself attempts any work in the product during the guarantee period in order to rectify any faults.*

### 7.1 Inspection and cleaning

Check regularly that the power source is free from dirt.


The power source should be regularly blown clean using dry compressed air at reduced pressure. More frequently in dirty environments.

Otherwise the air inlet/outlet may become blocked and cause overheating. To avoid this you can use an airfilter.

The airfilter is an accessory. Ordering number can be found on page 21.

### 7.2 Topping up the coolant

We recommend a 50/50 % mixture of water and ethylene glycol.

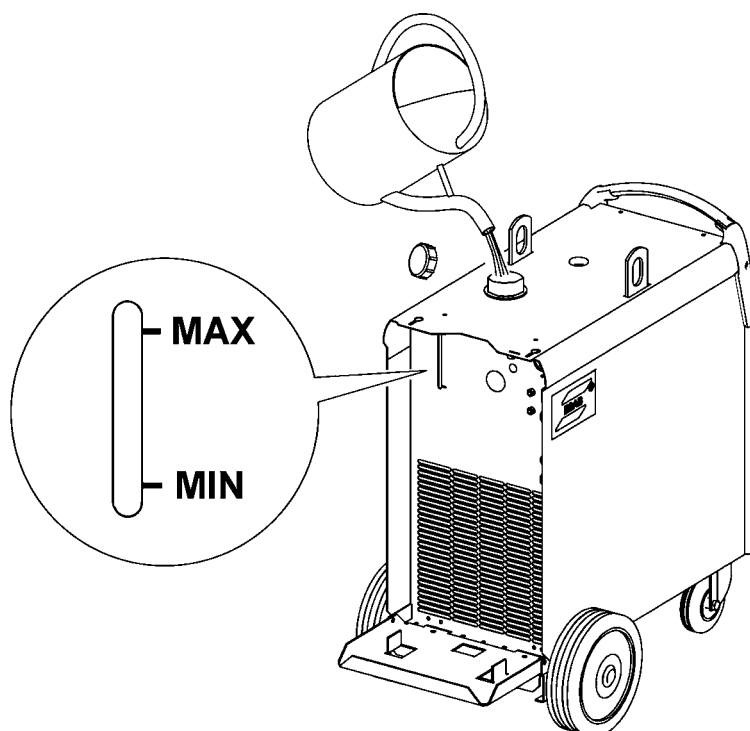

## **8 FAULT TRACING**

*Try these recommended checks and inspections before sending for an authorised service technician.*

<b>Type of fault</b>	<b>Actions</b>
No arc	<ul style="list-style-type: none"> <li>• Check that the mains power supply switch is turned on.</li> <li>• Check that the welding current supply and return cables are correctly connected.</li> <li>• Check that correct current value is set.</li> <li>• Check to see whether the MCB has tripped.</li> </ul>
Welding current is interrupted during welding	<ul style="list-style-type: none"> <li>• Check whether the thermal overload trip has operated (indicated by the orange lamp on the front).</li> <li>• Check the main power supply fuses.</li> </ul>
Thermal overload trips operate frequently	<ul style="list-style-type: none"> <li>• Check to see whether the air filters are clogged.</li> <li>• Make sure that you are not exceeding the rated data for the power source (i.e. that the unit is not being overloaded).</li> </ul>
Poor welding performance	<ul style="list-style-type: none"> <li>• Check that the welding current supply and return cables are correctly connected.</li> <li>• Check that the correct current value is set.</li> <li>• Check that the correct welding wires are being used.</li> <li>• Check the main power supply fuses.</li> </ul>




## **9 ORDERING OF SPARE PARTS**

**ESABMig 405 & ESABMig 505 is designed and tested in accordance with the international and European standards IEC/EN 60974-1 and EN 60974-10. It is the obligation of the service unit which has carried out the service or repair work to make sure that the product still conforms to the said standard.**

Spare parts may be ordered through your nearest ESAB dealer, see the last page of this publication.

# Diagram

## ESABMig 405 (400-415V)

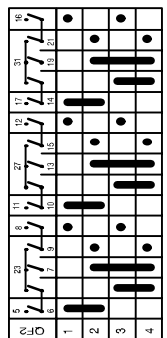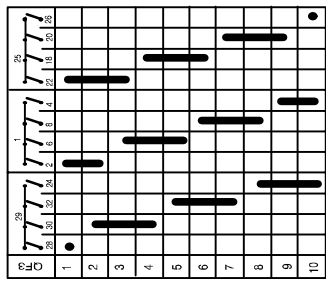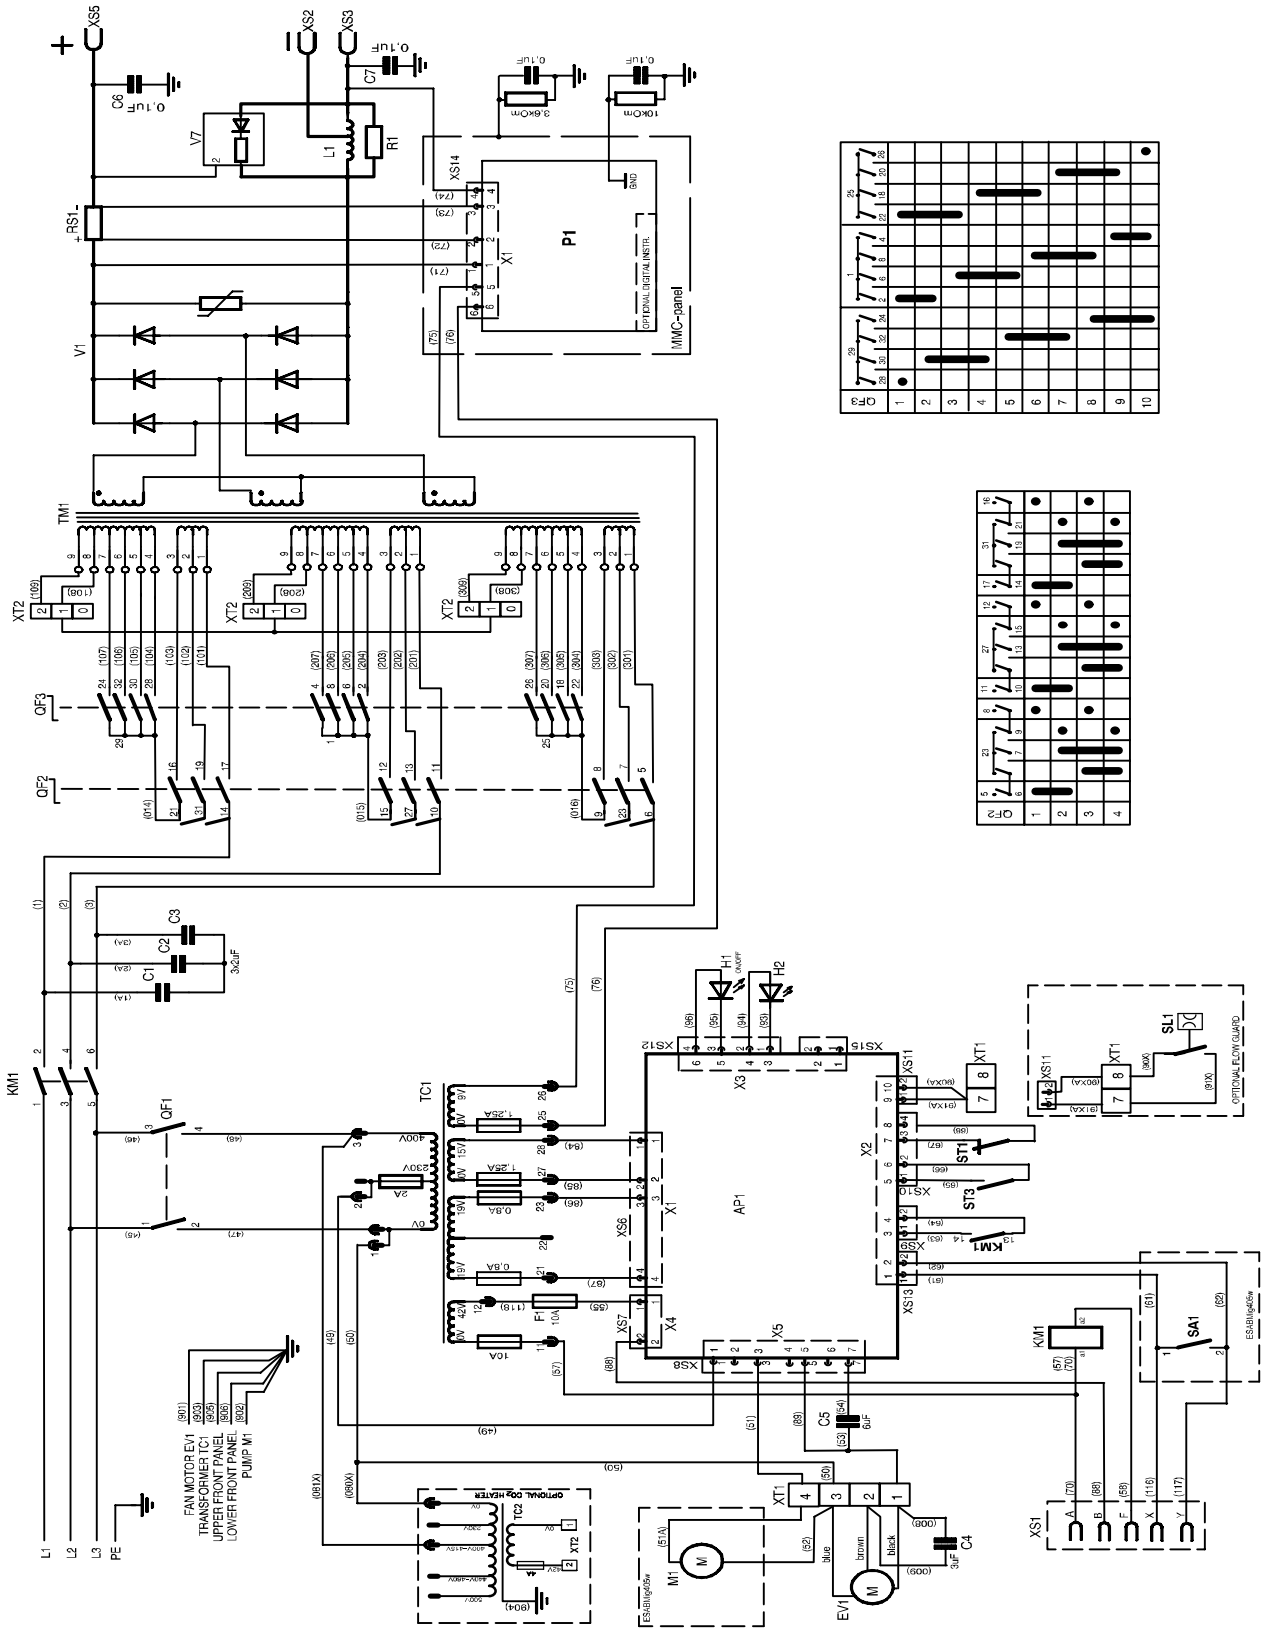















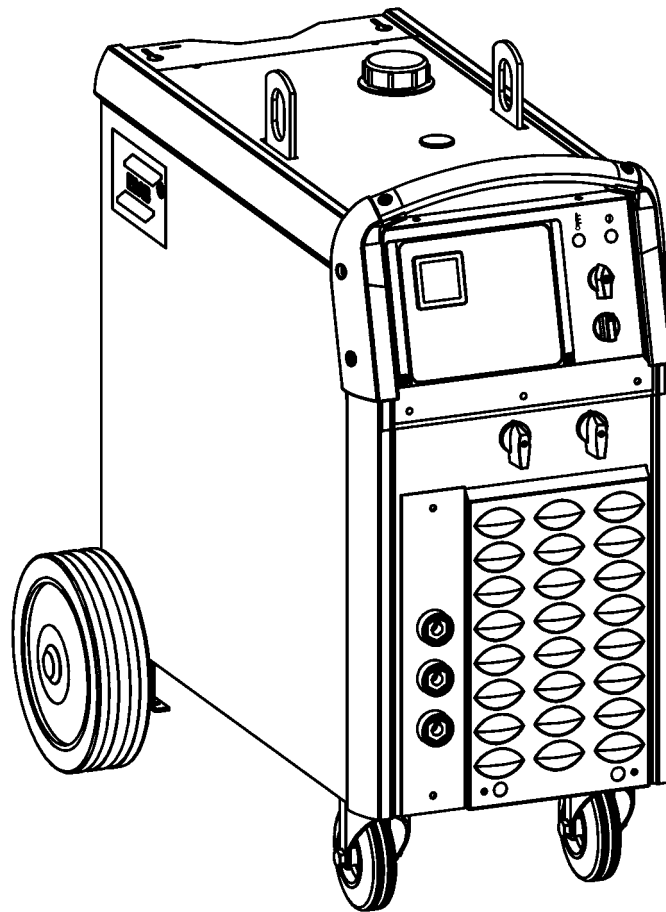






Valid for serial no. 246-XXX-XXXX

### Ordering numbers for ESABMig 405, ESABMig 505

0349 302 408	ESABMig 405	400-415V 3~50Hz
0349 302 713	ESABMig 405	230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz
0349 302 407	ESABMig 405w	400-415V 3~50Hz; with water cooler
0349 302 711	ESABMig 405w	230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz; with water cooler
0349 303 563	ESABMig 405	400-415V 3~50Hz; with digital instrument
0349 303 564	ESABMig 405w	400-415V 3~50Hz; with water cooler, with digital instrument
0349 302 404	ESABMig 505	400-415V 3~50Hz
0349 302 436	ESABMig 505	230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz
0349 302 403	ESABMig 505w	400-415V 3~50Hz; with water cooler
0349 302 435	ESABMig 505w	230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz; with water cooler
0349 303 565	ESABMig 505	400-415V 3~50Hz; with digital instrument
0349 303 566	ESABMig 505w	400-415V 3~50Hz; with water cooler, with digital instrument

Accessories

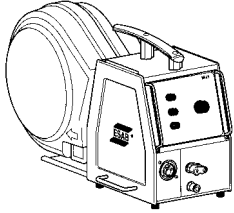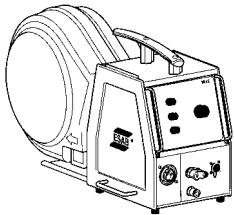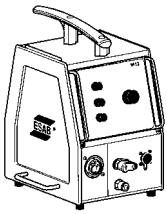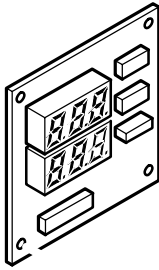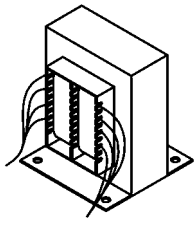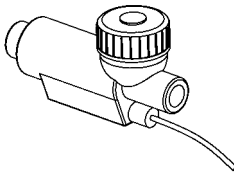	<p><b>Feeder with capsulated bobbin, M11 panel</b></p> <p>ESABFeed 30-2 ..... 0459 116 781</p> <p>ESABFeed 30-2 with water ..... 0459 116 791</p>
	<p><b>Feeder with capsulated bobbin, M12 panel</b></p> <p>ESABFeed 30-4 ..... 0459 116 882</p> <p>ESABFeed 30-4 with water ..... 0459 116 892</p> <p>ESABFeed 48-4 ..... 0459 116 982</p> <p>ESABFeed 48-4 with water ..... 0459 116 992</p>
	<p><b>Feeder for Marathon Pac™, M12 panel</b></p> <p>ESABFeed 30-4 ..... 0459 114 882</p> <p>ESABFeed 30-4 with water ..... 0459 114 892</p> <p>ESABFeed 48-4 ..... 0459 114 982</p> <p>ESABFeed 48-4 with water ..... 0459 114 992</p>
	<p><b>Digital meter</b></p> <p>for ESABMig 405 ..... 0349 302 451</p> <p>for ESABMig 505 ..... 0349 302 424</p>
	<p><b>Transformer kit for CO<sub>2</sub> heater ..... 0349 302 250</b></p>
	<p><b>Water flow guard ..... 0349 302 251</b></p>

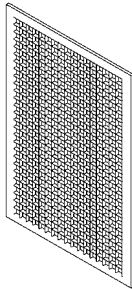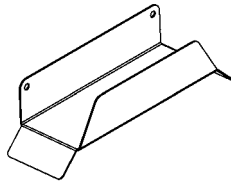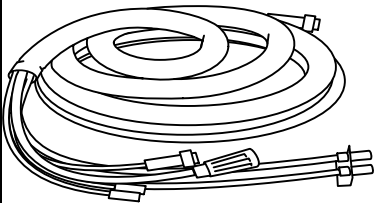	<p><b>Filter</b> ..... 0349 302 423</p>
	<p><b>Cable holder</b> ..... 0349 303 362</p>
	<p><b>Connection sets for 400A machines</b></p> <p>Connection set 1,7m ..... 0469 836 880</p> <p>Connection set 10m ..... 0469 836 881</p> <p>Connection set 15m ..... 0469 836 882</p> <p>Connection set 25m ..... 0469 836 883</p> <p>Connection set 35m ..... 0469 836 884</p> <p>Connection set 1,7m, water ..... 0469 836 885</p> <p>Connection set 10m, water ..... 0469 836 886</p> <p>Connection set 15m, water ..... 0469 836 887</p> <p>Connection set 25m, water ..... 0469 836 888</p> <p>Connection set 35m, water ..... 0469 836 889</p> <p><b>Connection sets for 500A machines</b></p> <p>Connection set 1,7m ..... 0469 836 890</p> <p>Connection set 10m ..... 0469 836 891</p> <p>Connection set 15m ..... 0469 836 892</p> <p>Connection set 25m ..... 0469 836 893</p> <p>Connection set 35m ..... 0469 836 894</p> <p>Connection set 1,7m, water ..... 0469 836 895</p> <p>Connection set 10m, water ..... 0469 836 896</p> <p>Connection set 15m, water ..... 0469 836 897</p> <p>Connection set 25m, water ..... 0469 836 898</p> <p>Connection set 35m, water ..... 0469 836 899</p>
	<p><b>Stabilizer</b> ..... 0349 303 474</p> <p><b>CB (counter balance) KIT</b> ..... 0349 309 748</p>

# ESAB subsidiaries and representative offices

## Europe

### AUSTRIA

ESAB Ges.m.b.H  
Vienna-Liesing  
Tel: +43 1 888 25 11  
Fax: +43 1 888 25 11 85

### BELGIUM

S.A. ESAB N.V.  
Brussels  
Tel: +32 2 745 11 00  
Fax: +32 2 745 11 28

### THE CZECH REPUBLIC

ESAB VAMBERK s.r.o.  
Prague  
Tel: +420 2 819 40 885  
Fax: +420 2 819 40 120

### DENMARK

Aktieselskabet ESAB  
Copenhagen-Valby  
Tel: +45 36 30 01 11  
Fax: +45 36 30 40 03

### FINLAND

ESAB Oy  
Helsinki  
Tel: +358 9 547 761  
Fax: +358 9 547 77 71

### FRANCE

ESAB France S.A.  
Cergy Pontoise  
Tel: +33 1 30 75 55 00  
Fax: +33 1 30 75 55 24

### GERMANY

ESAB GmbH  
Solingen  
Tel: +49 212 298 0  
Fax: +49 212 298 218

### GREAT BRITAIN

ESAB Group (UK) Ltd  
Waltham Cross  
Tel: +44 1992 76 85 15  
Fax: +44 1992 71 58 03

### ESAB Automation Ltd

Andover  
Tel: +44 1264 33 22 33  
Fax: +44 1264 33 20 74

### HUNGARY

ESAB Kft  
Budapest  
Tel: +36 1 20 44 182  
Fax: +36 1 20 44 186

### ITALY

ESAB Saldatura S.p.A.  
Mesero (Mi)  
Tel: +39 02 97 96 81  
Fax: +39 02 97 28 91 81

### THE NETHERLANDS

ESAB Nederland B.V.  
Utrecht  
Tel: +31 30 2485 377  
Fax: +31 30 2485 260

### NORWAY

AS ESAB  
Larvik  
Tel: +47 33 12 10 00  
Fax: +47 33 11 52 03

### POLAND

ESAB Sp.zo.o.  
Katowice  
Tel: +48 32 351 11 00  
Fax: +48 32 351 11 20

### PORTUGAL

ESAB Lda  
Lisbon  
Tel: +351 8 310 960  
Fax: +351 1 859 1277

### SLOVAKIA

ESAB Slovakia s.r.o.  
Bratislava  
Tel: +421 7 44 88 24 26  
Fax: +421 7 44 88 87 41

### SPAIN

ESAB Ibérica S.A.  
Alcalá de Henares (MADRID)  
Tel: +34 91 878 3600  
Fax: +34 91 802 3461

### SWEDEN

ESAB Sverige AB  
Gothenburg  
Tel: +46 31 50 95 00  
Fax: +46 31 50 92 22  
  
ESAB International AB  
Gothenburg  
Tel: +46 31 50 90 00  
Fax: +46 31 50 93 60

### SWITZERLAND

ESAB AG  
Dietikon  
Tel: +41 1 741 25 25  
Fax: +41 1 740 30 55

## North and South America

### ARGENTINA

CONARCO  
Buenos Aires  
Tel: +54 11 4 753 4039  
Fax: +54 11 4 753 6313

### BRAZIL

ESAB S.A.  
Contagem-MG  
Tel: +55 31 2191 4333  
Fax: +55 31 2191 4440

### CANADA

ESAB Group Canada Inc.  
Mississauga, Ontario  
Tel: +1 905 670 02 20  
Fax: +1 905 670 48 79

### MEXICO

ESAB Mexico S.A.  
Monterrey  
Tel: +52 8 350 5959  
Fax: +52 8 350 7554

### USA

ESAB Welding & Cutting Products  
Florence, SC  
Tel: +1 843 669 44 11  
Fax: +1 843 664 57 48

## Asia/Pacific

### CHINA

Shanghai ESAB A/P  
Shanghai  
Tel: +86 21 5308 9922  
Fax: +86 21 6566 6622

### INDIA

ESAB India Ltd  
Calcutta  
Tel: +91 33 478 45 17  
Fax: +91 33 468 18 80

### INDONESIA

P.T. ESABindo Pratama  
Jakarta  
Tel: +62 21 460 0188  
Fax: +62 21 461 2929

### JAPAN

ESAB Japan  
Tokyo  
Tel: +81 3 5296 7371  
Fax: +81 3 5296 8080

### MALAYSIA

ESAB (Malaysia) Snd Bhd  
Shah Alam Selangor  
Tel: +60 3 5511 3615  
Fax: +60 3 5512 3552

### SINGAPORE

ESAB Asia/Pacific Pte Ltd  
Singapore  
Tel: +65 6861 43 22  
Fax: +65 6861 31 95

### SOUTH KOREA

ESAB SeAH Corporation  
Kyungnam  
Tel: +82 55 269 8170  
Fax: +82 55 289 8864

### UNITED ARAB EMIRATES

ESAB Middle East FZE  
Dubai  
Tel: +971 4 887 21 11  
Fax: +971 4 887 22 63

## Representative offices

### BULGARIA

ESAB Representative Office  
Sofia  
Tel/Fax: +359 2 974 42 88

### EGYPT

ESAB Egypt  
Dokki-Cairo  
Tel: +20 2 390 96 69  
Fax: +20 2 393 32 13

### ROMANIA

ESAB Representative Office  
Bucharest  
Tel/Fax: +40 1 322 36 74

### RUSSIA-CIS

ESAB Representative Office  
Moscow  
Tel: +7 095 937 98 20  
Fax: +7 095 937 95 80

ESAB Representative Office  
St Petersburg

Tel: +7 812 325 43 62  
Fax: +7 812 325 66 85

## Distributors

*For addresses and phone numbers to our distributors in other countries, please visit our home page*

[www.esab.com](http://www.esab.com)



ESAB AB  
SE-695 81 LAXÅ  
SWEDEN  
Phone +46 584 81 000



[www.esab.com](http://www.esab.com)